


HOW TO USE THE "ROGER" FM RECEIVER

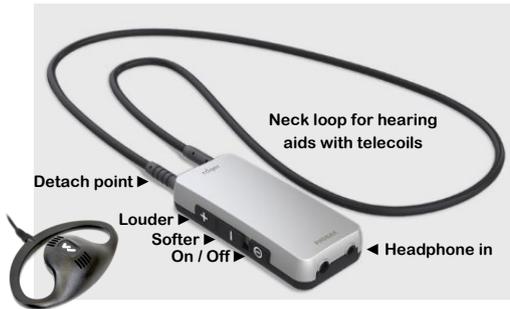


Optional 'open' earphones

- (1) *(For hearing aids fitted with telecoils) - Put neck loop around neck. (If necessary unfasten at detach point, place around neck and re-fasten)*
- (2) Switch receiver ON.
- (3) Switch hearing aids to 'telecoil' mode.
- (4) Adjust loudness levels on 'Roger' receiver and hearing aids to a comfortable level.
- (5) *(For users without hearing aids) Connect optional loan headphones to base of receiver and adjust loudness to a comfortable level. (Neck loop will automatically switch off when headphones are connected.)*

Please return the receiver and attachments to sound controller at the end of program. PLEASE! Do not leave equipment un-attended on your seat.

This instruction card has been downloaded as a free community service from Christian Services for the Blind and Hearing-impaired. <http://csfbhi.adventistchurch.com/resources-page/> Ph +61 2 9847 2223

HOW TO USE THE "ROGER" FM RECEIVER

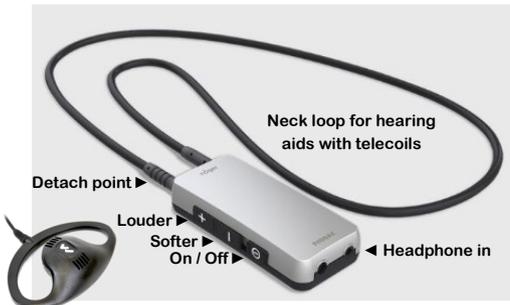


Optional 'open' earphones

- (1) *(For hearing aids fitted with telecoils) - Put neck loop around neck. (If necessary unfasten at detach point, place around neck and re-fasten)*
- (2) Switch receiver ON.
- (3) Switch hearing aids to 'telecoil' mode.
- (4) Adjust loudness levels on 'Roger' receiver and hearing aids to a comfortable level.
- (5) *(For users without hearing aids) Connect optional loan headphones to base of receiver and adjust loudness to a comfortable level. (Neck loop will automatically switch off when headphones are connected.)*

Please return the receiver and attachments to sound controller at the end of program. PLEASE! Do not leave equipment un-attended on your seat.

This instruction card has been downloaded as a free community service from Christian Services for the Blind and Hearing-impaired. <http://csfbhi.adventistchurch.com/resources-page/> Ph +61 2 9847 2223

HOW TO USE THE "ROGER" FM RECEIVER

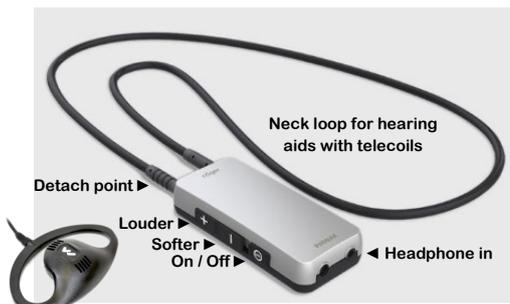

Optional 'open' earphones

- (1) *(For hearing aids fitted with telecoils) - Put neck loop around neck. (If necessary unfasten at detach point, place around neck and re-fasten)*
- (2) Switch receiver ON.
- (3) Switch hearing aids to 'telecoil' mode.
- (4) Adjust loudness levels on 'Roger' receiver and hearing aids to a comfortable level.
- (5) *(For users without hearing aids) Connect optional loan headphones to base of receiver and adjust loudness to a comfortable level. (Neck loop will automatically switch off when headphones are connected.)*

Please return the receiver and attachments to sound controller at the end of program. PLEASE! Do not leave equipment un-attended on your seat.

This instruction card has been downloaded as a free community service from Christian Services for the Blind and Hearing-impaired. <http://csfbhi.adventistchurch.com/resources-page/> Ph +61 2 9847 2223